 
 
 



METALBIT

Instrukcja montażu PRIMO 242 1383x 1045 x 450




Instrukcja montażu PRIMO 242 1383x 1045 x 450

- 1 - cokół - 1010 x 160
- 2L - bok lewy - 1378 x 452
- 2P - bok prawy - 1378 x 452
- 3 - tył - 348 x 1010
- 4 - przegroda - 942 x 427
- 5 - przegroda górna - 350 x 430
- 6 - wieniec górny - 1010 x 450
- 7 - wieniec dolny - 1010 x 447
- 8 - półka - 239 x 425
- 9 - listwa - 1010 x 100
- 10 - plecy HDF gr 3 mm - 972 x 1034

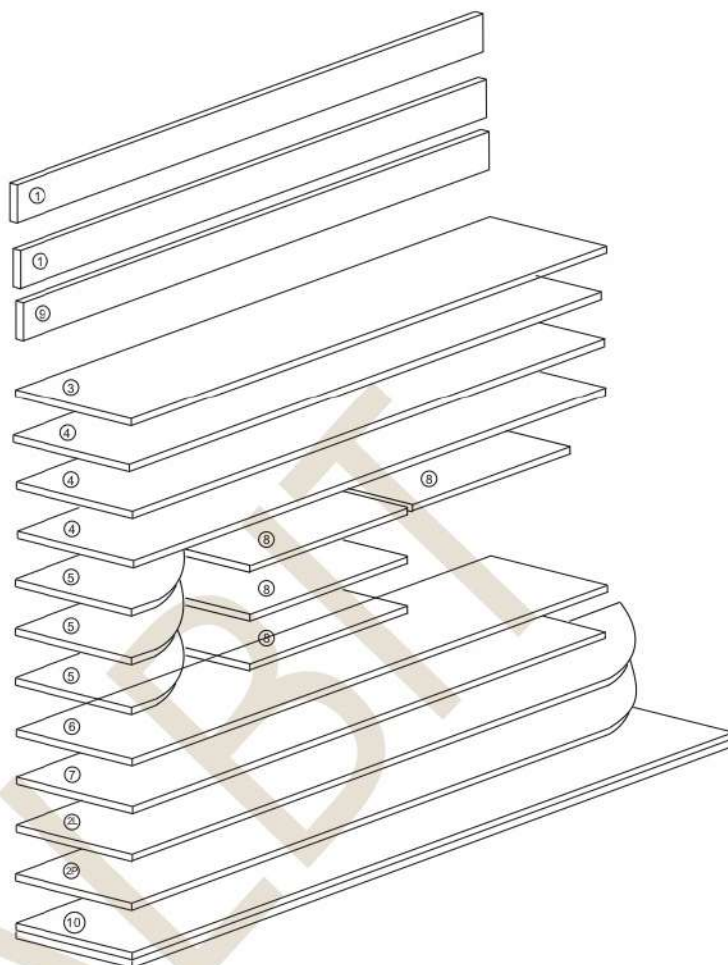


Nr		Il.szt
A	Wkręt 2,5x20 lub gwóźdź 3x30	30
B	Zacisk mimośrod	52
C	Kółek mimośrod	52
D	Złącze snapfix	16
E	Kółek drew 8x35	34
F	Wkręt złącza snapfix 5x8	16
G	Regulator	4
H	Zaślepka mimośrod	52
I	Wieszak	8
J	Wkręt 4x20	16


Instrukcja montażu PRIMO 242 1383x 1045 x 450

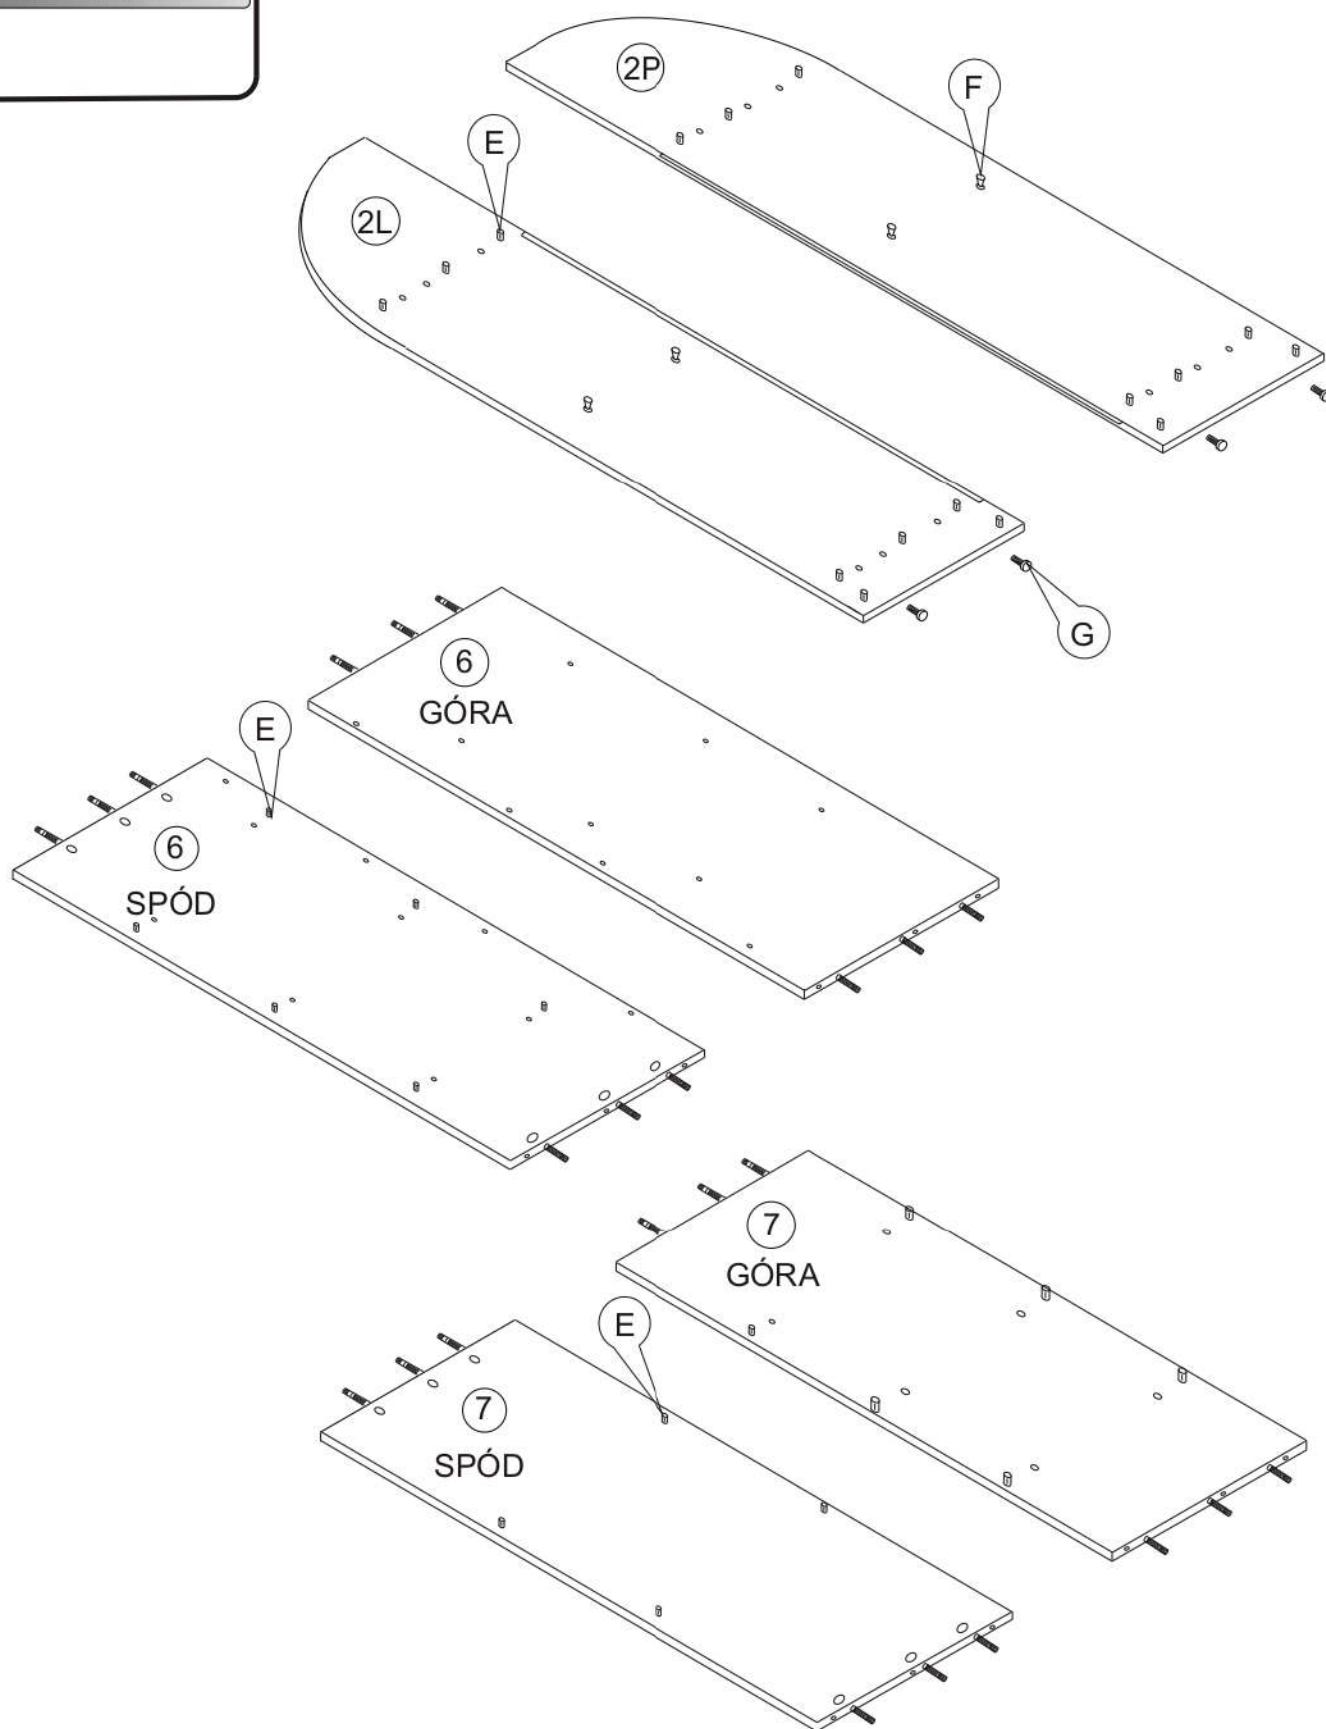

Instrukcja montażu PRIMO 242 1383x 1045 x 450

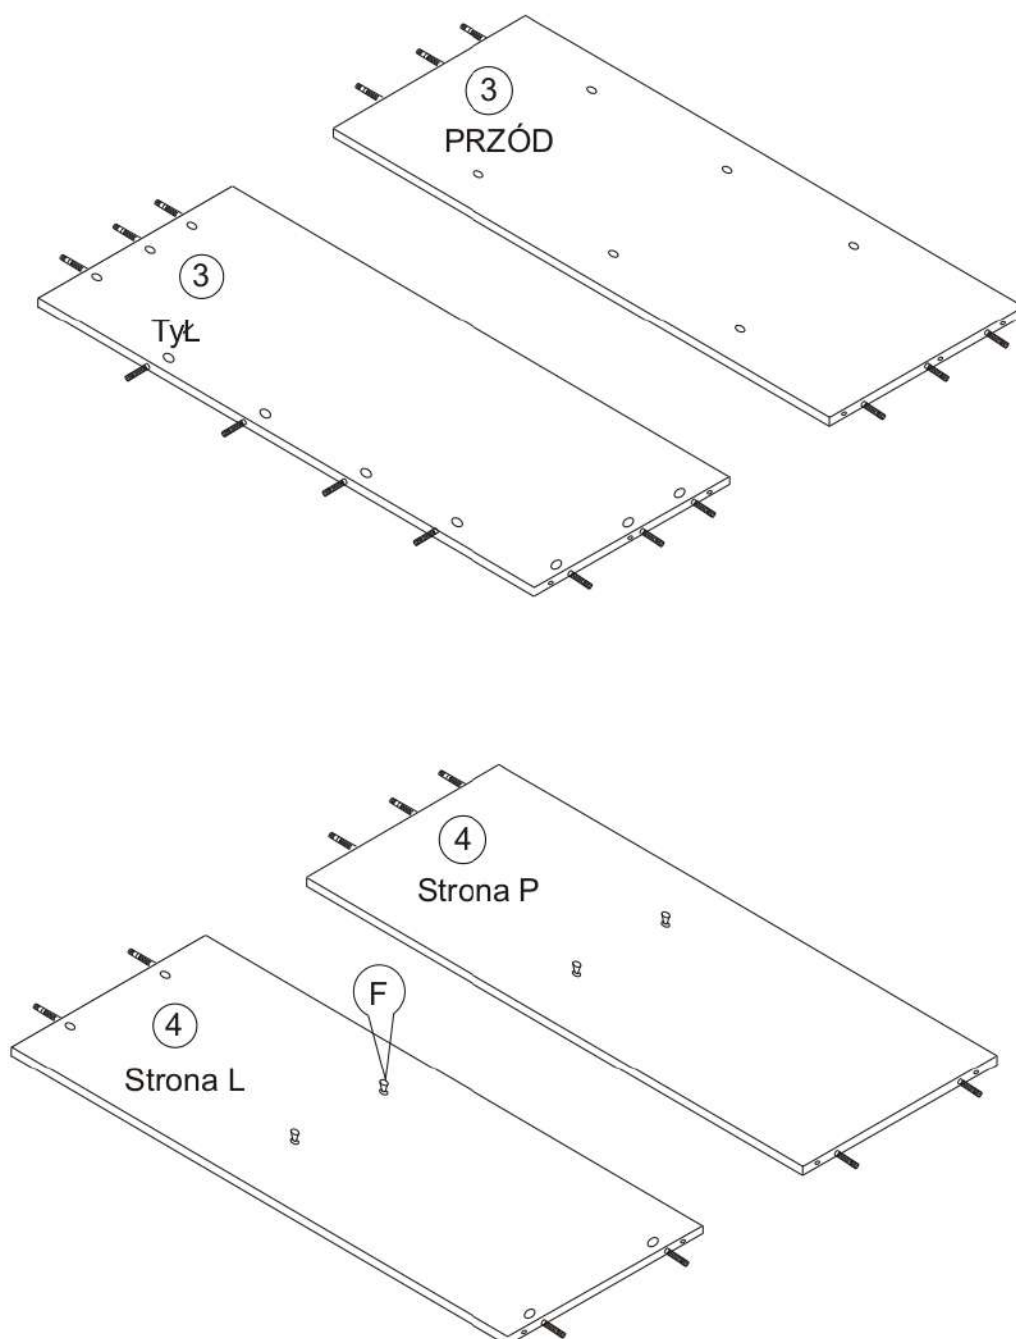


Instrukcja montażu PRIMO 242 1383x 1045 x 450

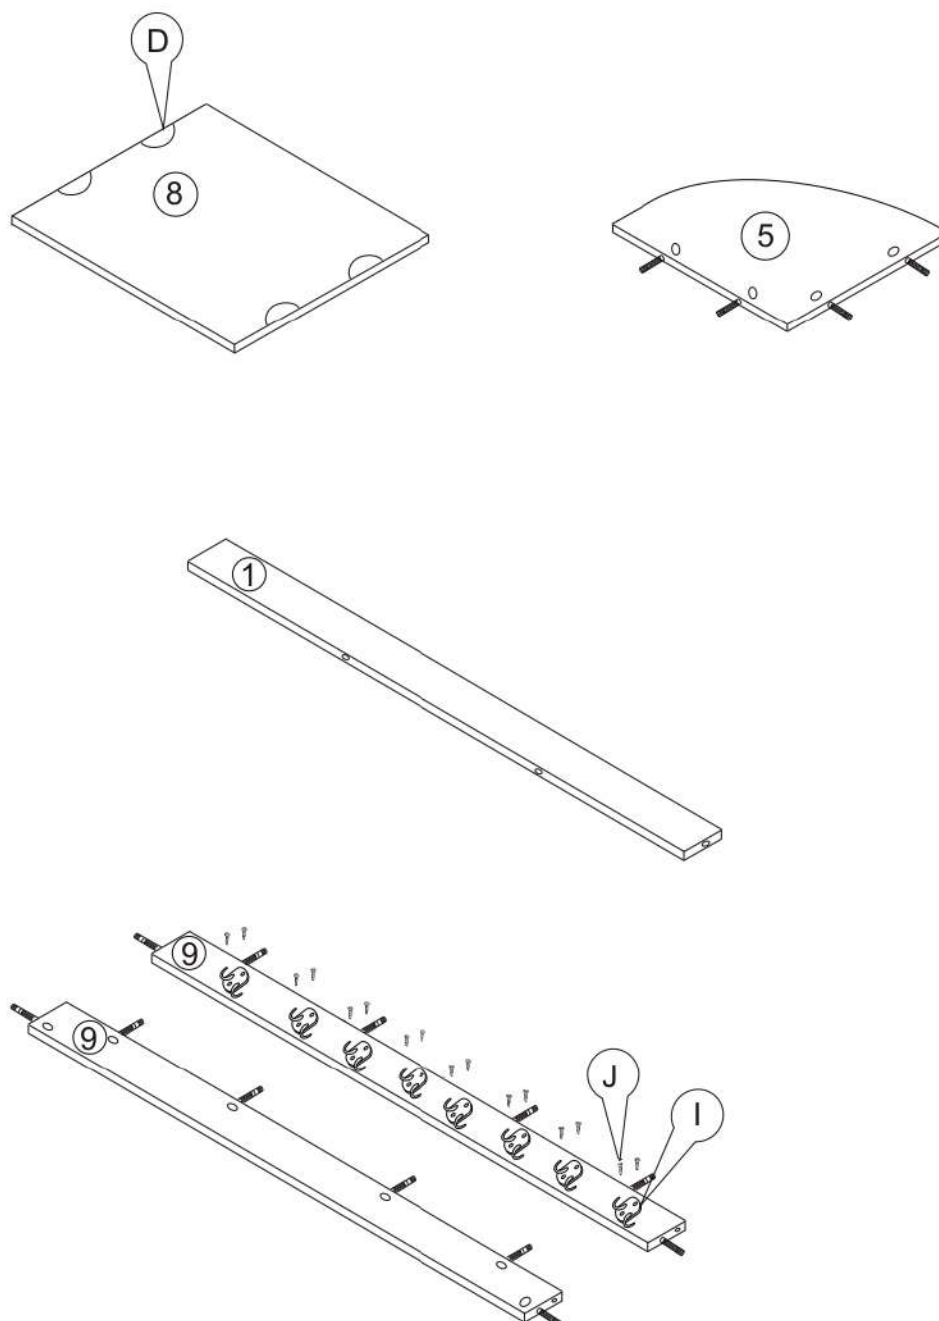


METALBIT

Instrukcja montażu PRIMO 242 1383x 1045 x 450

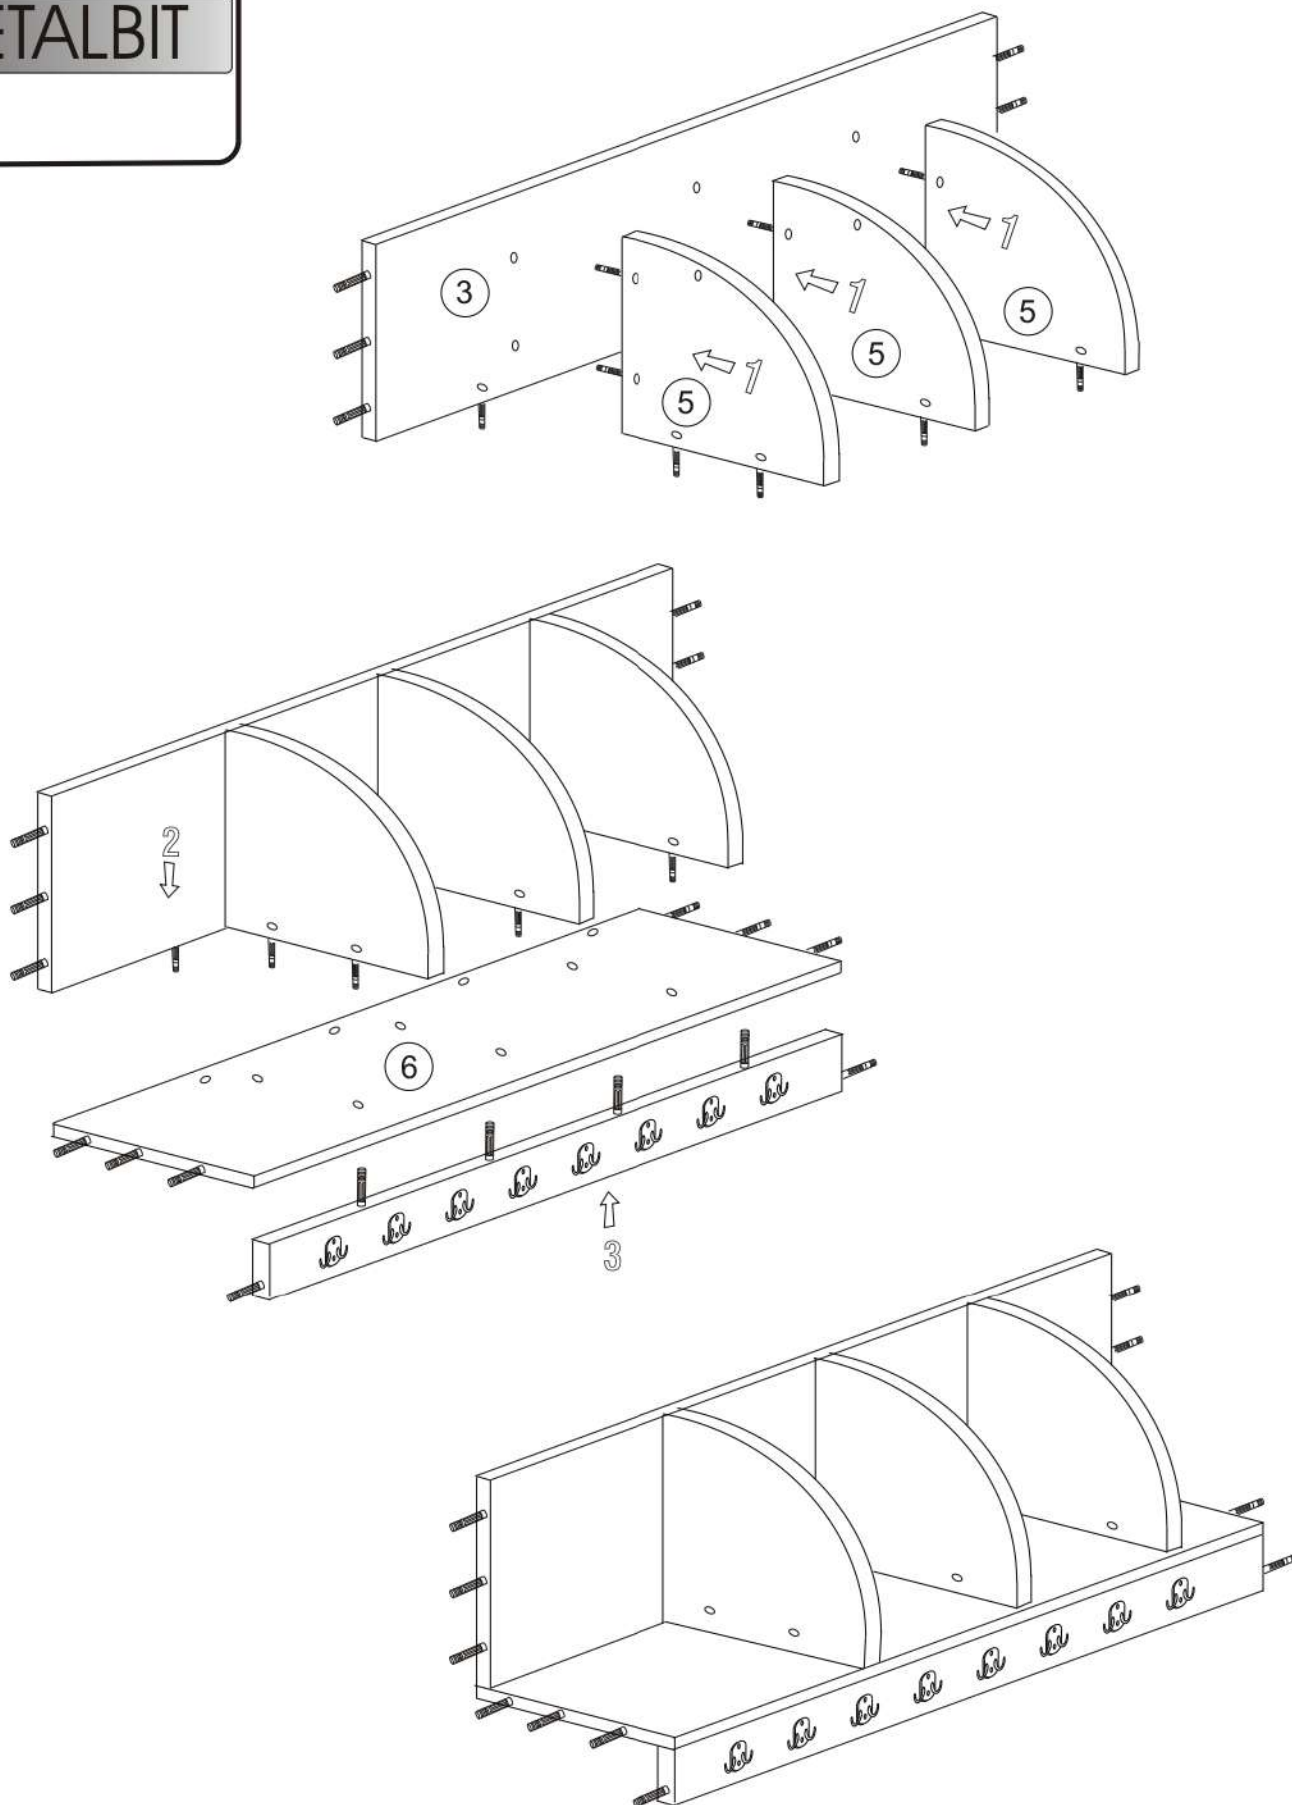

Instrukcja montażu PRIMO 242 1383x 1045 x 450

METALBIT

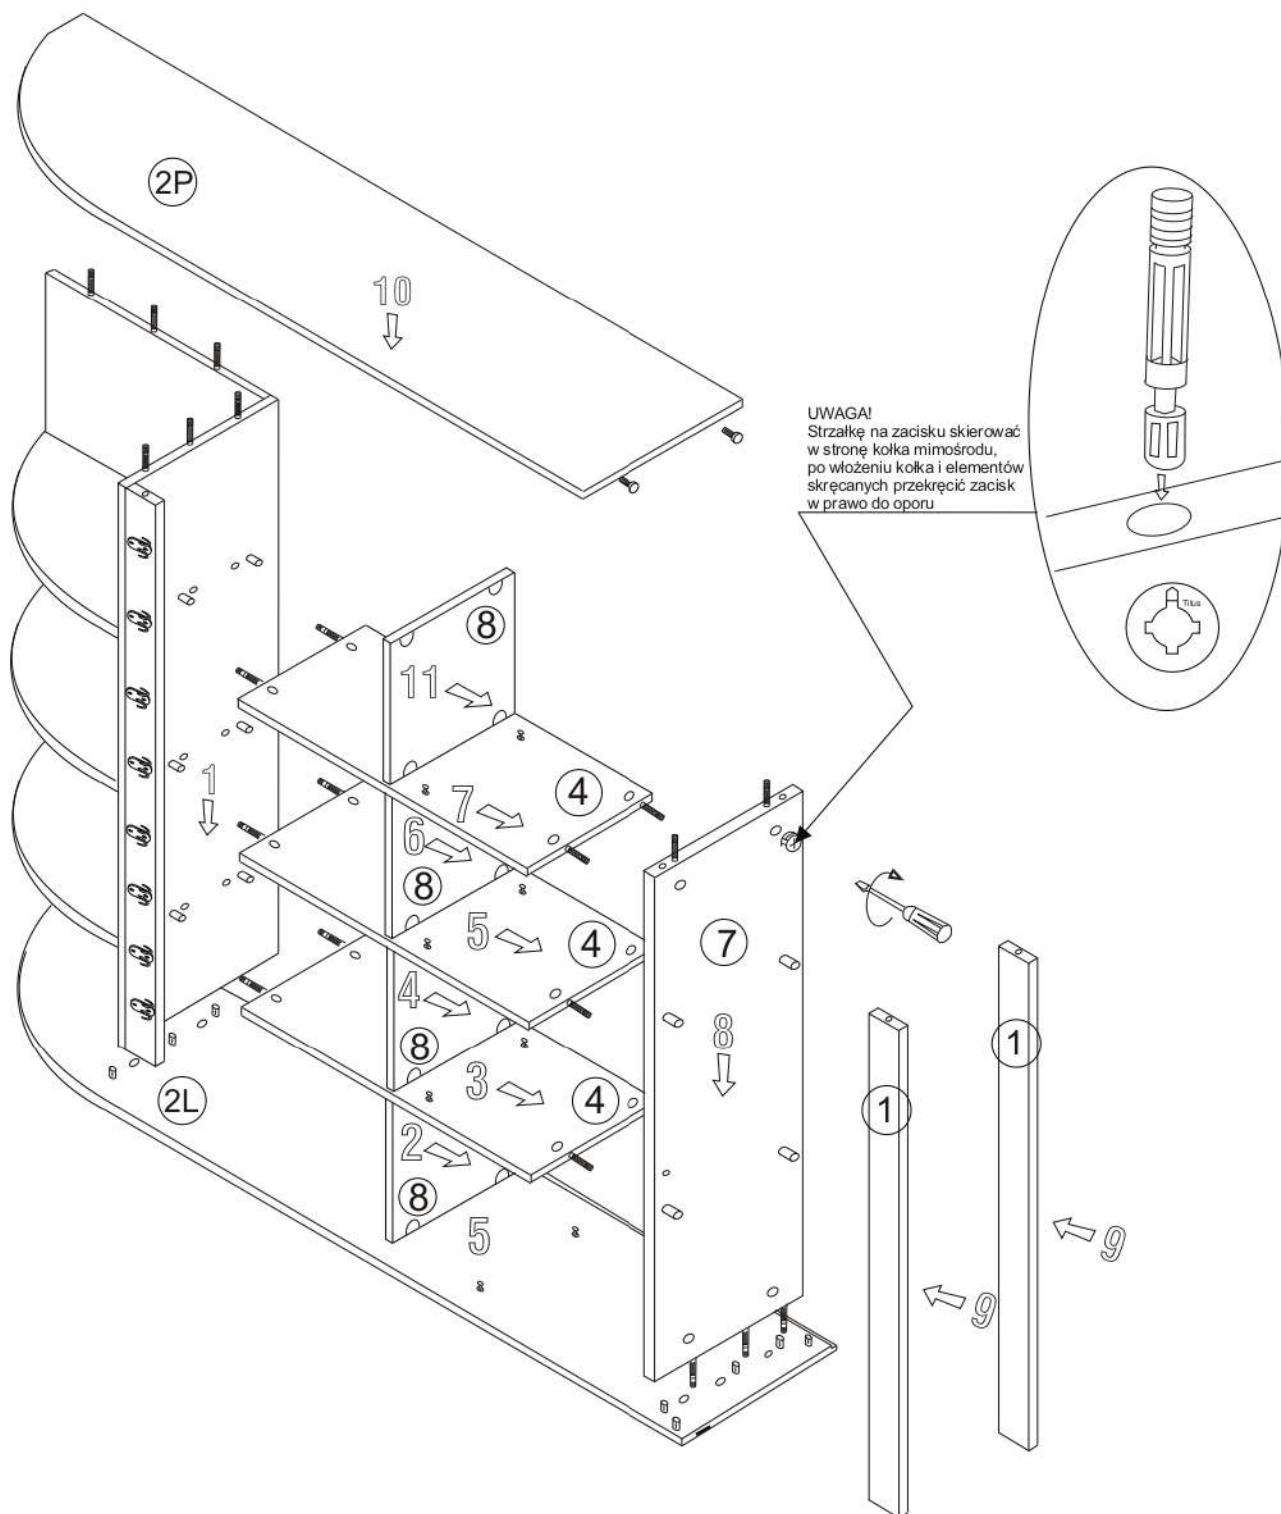

Instrukcja montażu PRIMO 242 1383x 1045 x 450

