



METALBIT

Instrukcja montażu PRIMO 217 1520x359x450

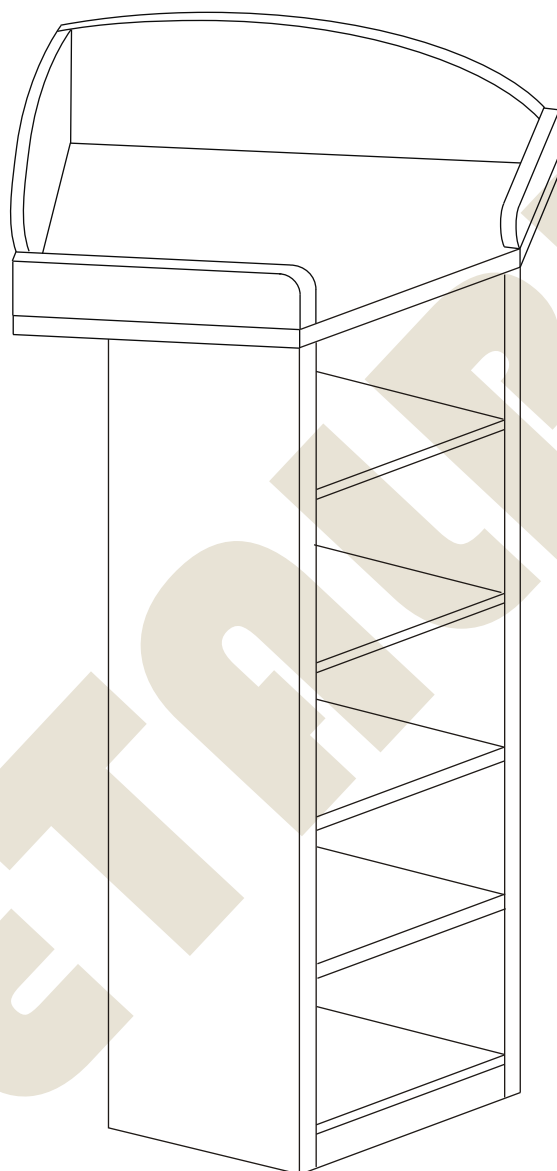


Instrukcja montażu PRIMO 217 1520x359x450

- | | |
|--------------------|--------------|
| 1 - cokół | - 323x 50 |
| 2L - bok lewy | - 1245 x 450 |
| 2P - bok prawy | - 1245 x 450 |
| 3 - wieniec górny | - 704 x 704 |
| 4 - wieniec dolny | - 323 x 447 |
| 5 - półka | - 323 x 427 |
| 6 - plecy | - 1207 x 345 |
| 7 - cokół górny 1 | - 450 x 110 |
| 8 - cokół górny 2 | - 450 x 110 |
| 9 - cokół górny 3 | - 686 x 252 |
| 10 - cokół górny 4 | - 686 x 252 |


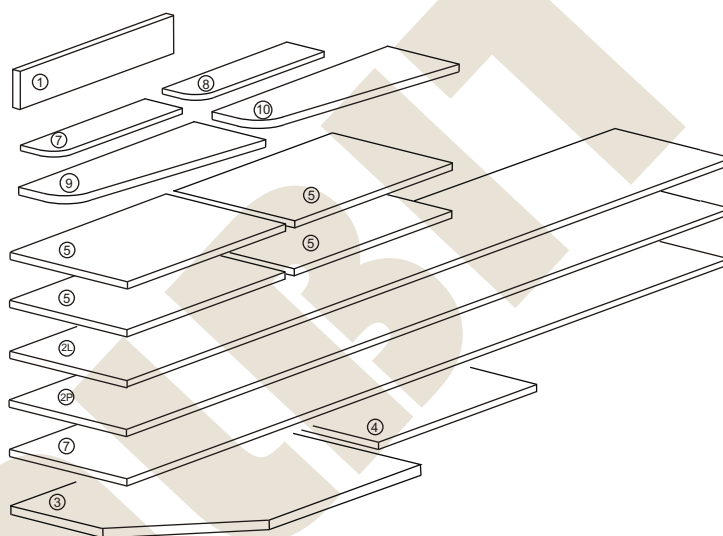


Nr		Il.szt
A	Wkręt 2,5x20	30
B	Zacisk mimośrodowy	8
C	Kołek mimośrodowy	8
D	Złącze snapfix	16
E	Kołek dREW 8x35	11
F	Zasłepka mimośrodowa	4
G	Ślizgacz	4
H	Wkręt złącza snapfix	16

Instrukcja montażu PRIMO 217 1520x359x450

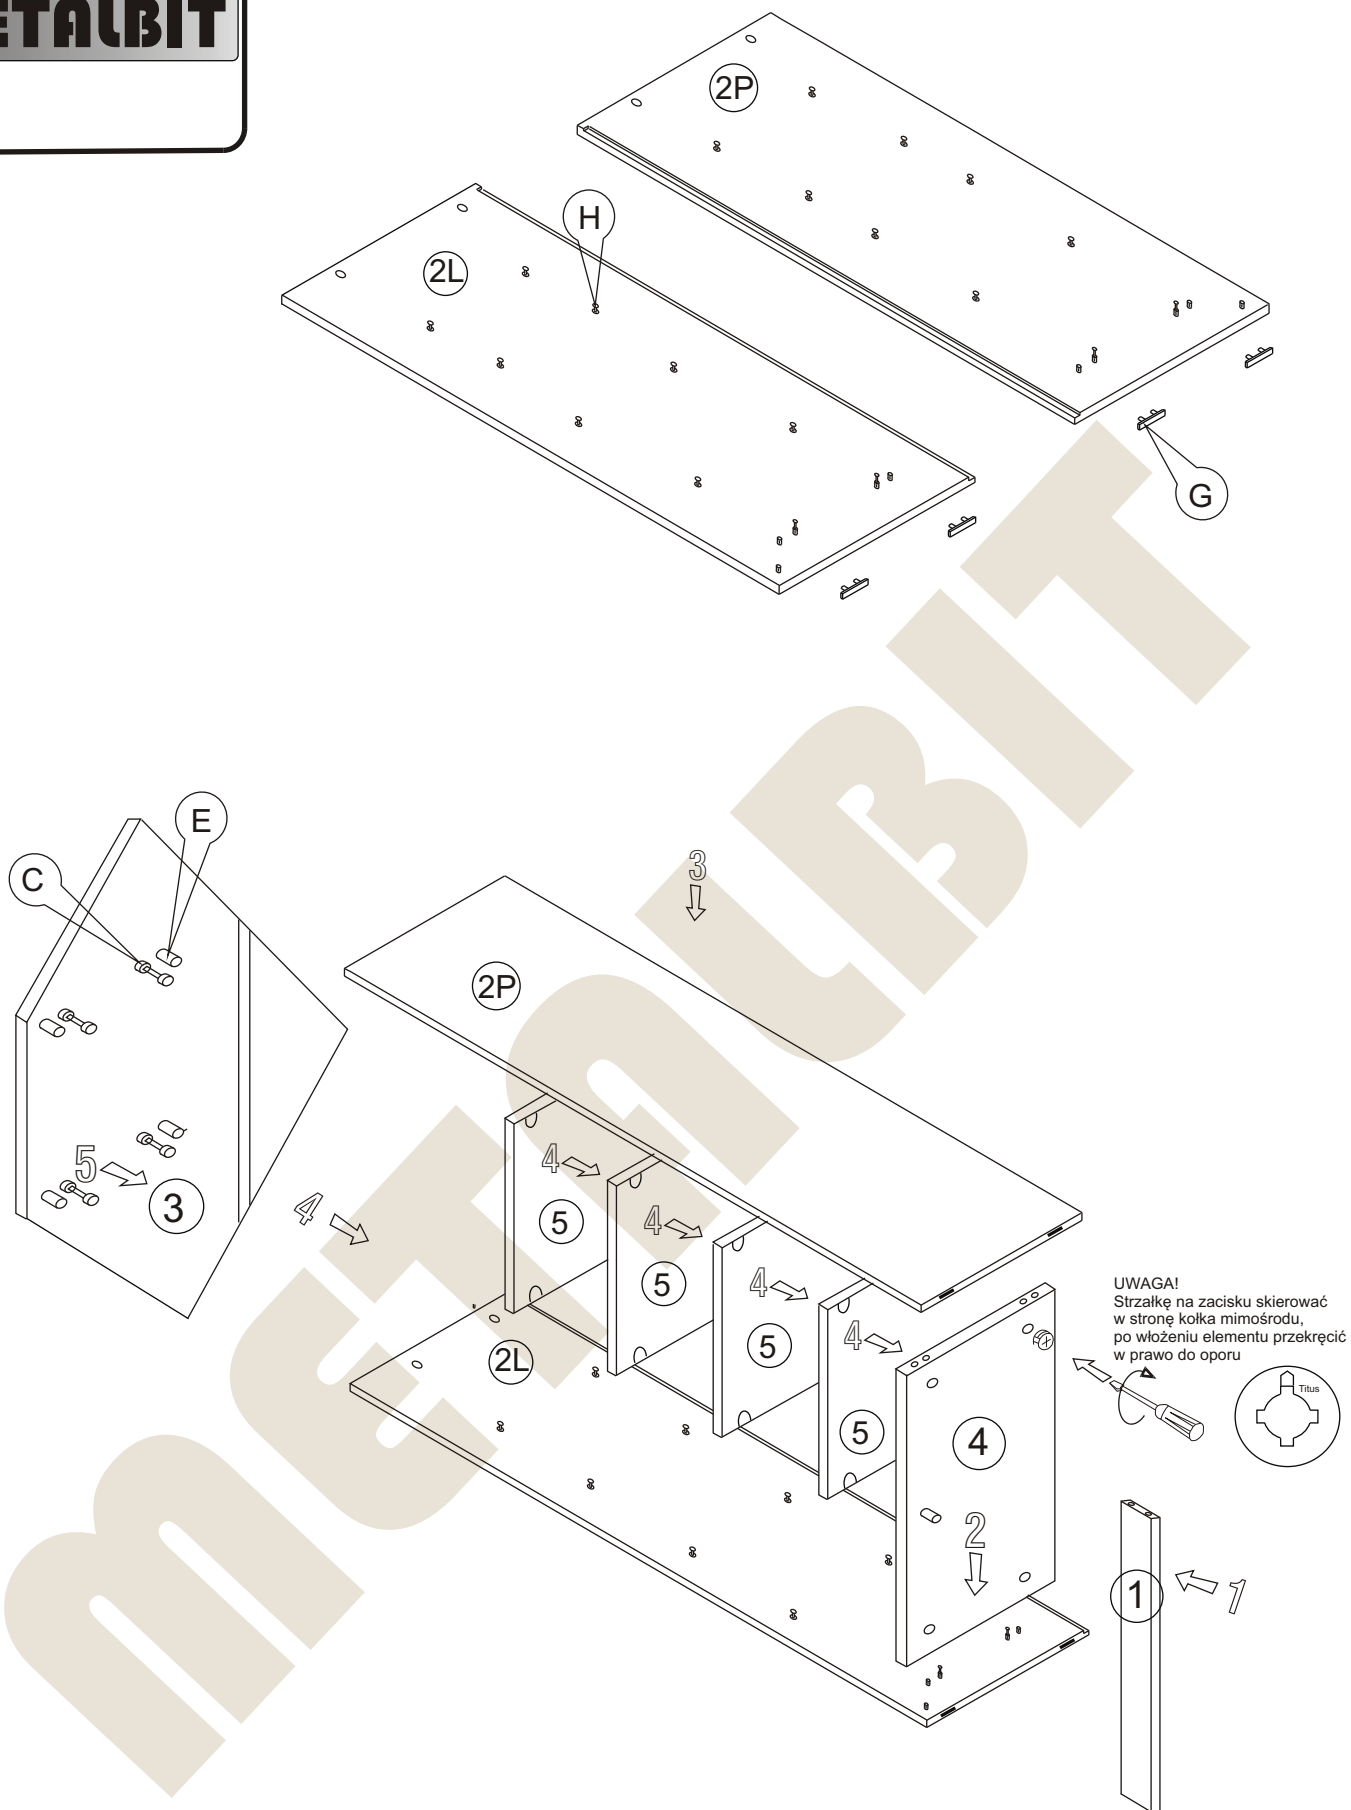

Instrukcja montażu PRIMO 217 1520x359x450

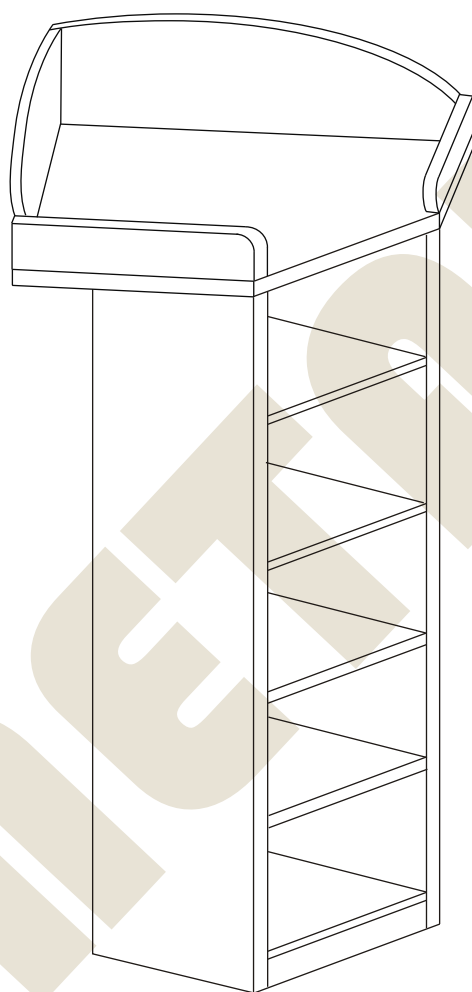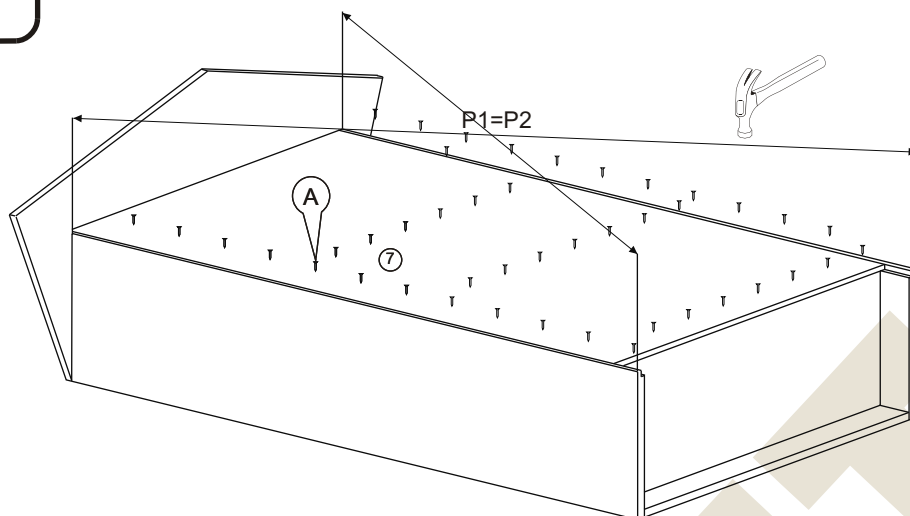

Więcej instrukcji i filmy montażowe dostępne na stronie
www.metalbit.com.pl/instrukcje_montazu

Metalbit Producent - meble szkolne, przedszkolne i biurowe www.metalbit.com.pl www.szkolniak.pl
78-460 Barwice ul. Zwycięzców 26 tel. (94) 373 23 95 tel. (94) 372 24 10 fax (94) 373 23 95